



BT-300/ BT-400 SMART REMOTE

User Manual



 
G20 VOICE REMOTE

User Manual




1 Button Legend

1. Power
2. Rewind
3. Play / Pause
4. BuzzTV / Live
5. Menu
6. DPad
7. OK Button
8. Back
9. Home
10. Volume Up / Down
11. Red
12. Yellow
13. Numbers
14. Page Down
15. Source
16. Fast Forward
17. Guide
18. Mouse
19. Channel Up / Down
20. Last Channel
21. Information
22. Green
23. Blue
24. Page Up

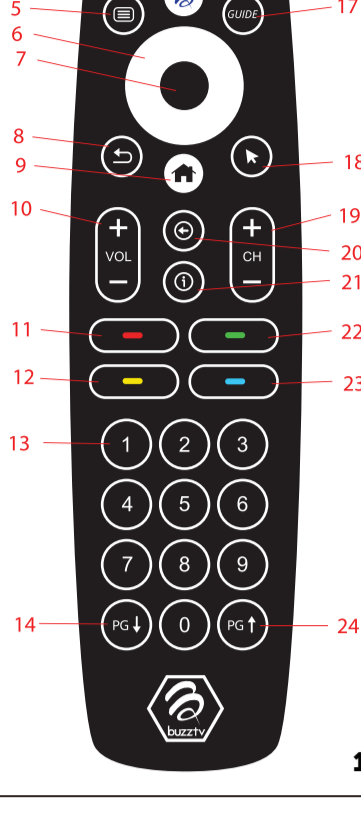

1

 1 Button Legend

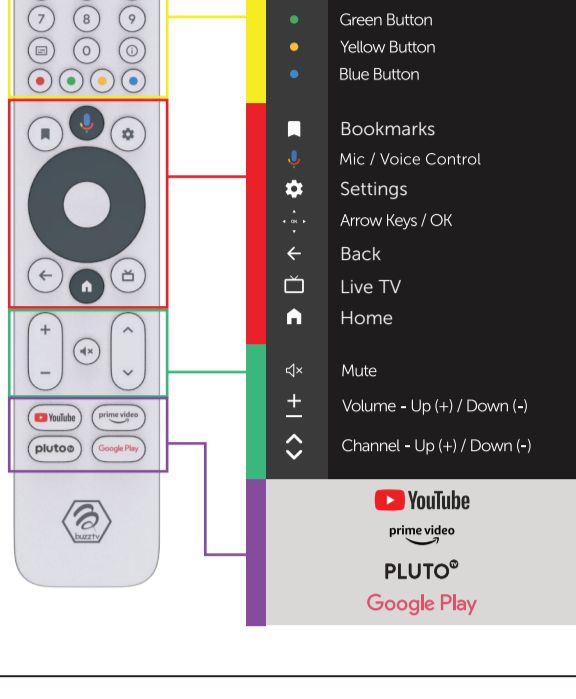

1

2 BuzzTV Smart Remote App



NOTE¹: Requires BT-400 and an enabled device. The remote must be BT paired to the device

NOTE²: If you are not using TV source pair, do not enable max audio on device
(Found in Buzz utilities under Volume control)

From the App you will be able to control:

Auto source pair your TV to the BT-400

This allows the user to have BT-400 control the TV's Power button, Volume up and down, the TV input source. Click on the tab in the app and the app will walk you through the set up.

Control the BT-400 Backlight

 
Program your backlight On or Off. Click on the tab and it will take you to the setting inside the device, select remote and you will see the toggle choice. (This feature is off by default for greater battery life)

2

2 Remote Pairing and Factory Reset

BT Remote Pairing

To place the remote into BT Pairing Mode, simultaneously press and hold the Home and Back buttons for 4 seconds until Green LED blinks. This means you are in pairing mode. Once paired, the green LED will stop blinking.

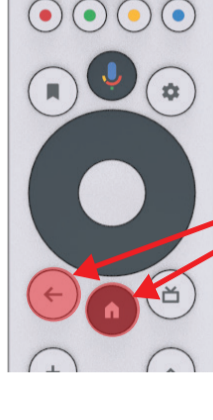


Simultaneously press and hold the **HOME button** and the **BACK button** for 4 seconds until it starts blinking

2

3 BT Remote Pairing and Factory Reset

BT Remote Pairing

 To place the remote into BT Pairing Mode, simultaneously press and hold the OK button and the HOME button for 4 seconds until it starts blinking, this indicates the remote is in Pairing Mode.

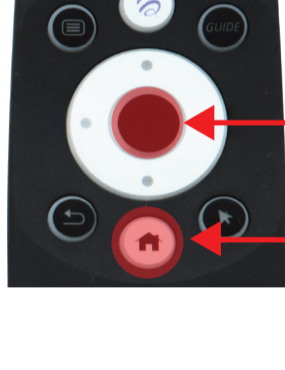

Simultaneously press and hold the **OK button** and the **HOME button** for 4 seconds until it starts blinking

3

BT Remote Factory Reset

Press and hold the OK button and the Mute button for longer than 4 seconds.



Hold the **OK button** and the **Mute button** for 4 seconds until it blinks 2 times

3

3 Voice Control



To use Voice control press and hold microphone button down while speaking

Only supported on certain models*

4

4 Manual TV Source Pair (2 methods)

The manual TV source pair allows control of:

- TV ON / OFF
- Volume up and down
- TV input source change

NOTE: The BT-400 and BT-300 will pair with most popular brands, if you have an older TV or off brand this feature may not work.

The following TV brands are pre-programmed on the numeric keys (1 thru 0)

1. Samsung
2. LG
3. Sony
4. Panasonic
5. TCL / Thomson
6. Toshiba
7. Grundig
8. Sharp
9. Haier
0. Philips

5

4 HDMI CEC with P6 or X5 SS



Note when using with a newer TV

When using with the P6 PowerStation or the X5 Super Sport, If you have a newer TV it maybe compatible to use the HDMI CEC Audio controls that will allow you to control the TV's Volume.

First go into volume settings and turn off MAX volume Enabled

Then go into HDMI CEC settings & enable Volume control

5 Warranty Information

For warranty information and registration, please visit: www.buzztv.com/register

www.buzztv.com/support
cs@buzztv.com

5

Method 1: TV Programming Mode with a Top 10 TV Brand

Simultaneously press and hold the OK button and the Fast Forward button for 4 seconds. The remote will blink 3 times to indicate the remote is in TV source pair mode.



Simultaneously press and hold the **OK button** and the **Fast Forward button** for 4 seconds.

From the Top 10 list above, (Page 5) find your TV code (Ex. Sony is the 3 button) Press the number associated with your TV on the remote numeric keypad. This will pair the BT-400 to the TV. The TV volume control should appear on the TV screen which indicates you are TV source paired.

6

Method 2: TV Brand Search

First be within 1 meter to the bottom of the TV.

Simultaneously press and hold the Rewind and OK button for 4 seconds. The remotes LED indicator will blink 3 times and then turn solid red. This indicates the remote is in TV search mode.

Simultaneously press and hold the **OK button** and the **Rewind button** for 4 seconds.

 


Slowly press the Channel Up button on the remote once about every 3 seconds. When the volume indicator on the TV displays, discontinue pressing the Channel Up button and press the OK button. You are now TV paired.

7

5 Static Mouse (Only in BT mode)

Press the Cursor button to enable the Static Mouse Mode.

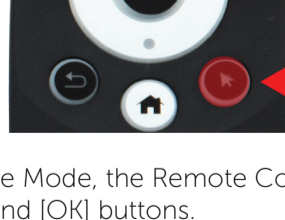

Cursor Button

In Mouse Mode, the Remote Control supports [Up], [Down], [Left], [Right] and [OK] buttons.

While using the Static Mouse if the user does not press any button for 15 seconds from the last button press, The Remote Control will exit Mouse Mode.

8

6 HDMI CEC with P6 or X5 SS



Note when using with a newer TV

When using with the P6 PowerStation or the X5 Super Sport, If you have a newer TV it maybe compatible to use the HDMI CEC Audio controls that will allow you to control the TV's Volume.

First go into volume settings and turn off MAX volume Enabled

Then go into HDMI CEC settings & enable Volume control

7 Warranty Information

For warranty information and registration, please visit: www.buzztv.com/register

www.buzztv.com/support
cs@buzztv.com

9