



**The Classic**  
ANNIVERSARY  
EDITION

## User Manual



### 1 Package Contents



THE CLASSIC ANNIVERSARY EDITION



USB TYPE-C POWER SUPPLY



2 X AA BATTERIES



BT-350 REMOTE



SETUP/HELP CARD



HDMI CABLE

### 2 Connection

#### AV Connection


A. Connect the AV cable of the 3 color (red/white/yellow) to the Classic's AV output interface, and the other end to the TV's AV input interface. Connection can be made by colour.

B. Power on the Classic. Set the TV video mode to AV input.

#### HDTV Connection

A. Connect HDMI cable to the Classic's output interface, and the other end to the TV's HDMI input interface.

B. Power on the Classic. Set the TV video mode to HDTV input.

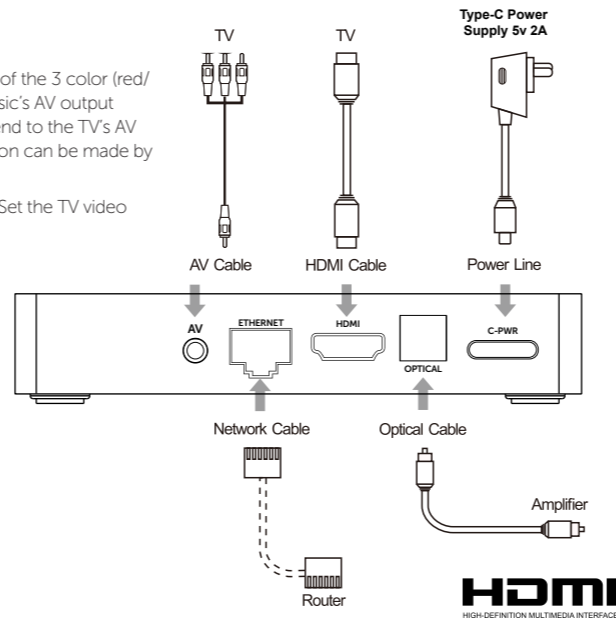

### 3 Installation Steps


1. Connect The Classic Set top box TV Box to the power supply.
2. Connect The Classic to your TV with an HDMI Cable or AV Cable.
3. For a wired connection, plug-in an Ethernet cable from the TV Box to your modem or router. For wireless, choose your Wi-Fi network and input your Wi-Fi password.
4. LED Light: Blue ON Red OFF Green INTERNET CONNECTION

### 4 Troubleshooting

**Warning:** Under no circumstances should you try to repair the Classic unit by yourself, as this will invalidate the warranty. Do not open it as there is a risk electrical shock. If any fault occurs, please first check with this troubleshooting checklist. If you are unable to remedy a problem by following this guide, contact your dealer for help.

Problem	Solution
No Power	<ul style="list-style-type: none"> <li>• Check if the power adapter is properly connected to the power and the TV box</li> <li>• Press the power on the remote controller to turn on the power</li> </ul>
No Picture	<ul style="list-style-type: none"> <li>• Re-Connect the HDTV cable or AV cable</li> <li>• Check if the TV is powered on</li> </ul>
No sound or distorted sound	<ul style="list-style-type: none"> <li>• Adjust the volume</li> <li>• Check that the speakers are connected correctly</li> </ul>
The TV box does not respond to the remote control	<ul style="list-style-type: none"> <li>• Aim the remote control directly at the sensor on the front of the TV box</li> <li>• Reduce the distance to the TV box</li> <li>• Replace batteries in the remote control</li> <li>• Possibility of system crash, disconnect and reconnect the power supply</li> </ul>
No sound during playback	<ul style="list-style-type: none"> <li>• The audio codec may not be supported by the TV box</li> <li>• Check the volume</li> </ul>
The contents of the USB or flash drive cannot be read	<ul style="list-style-type: none"> <li>• The USB or flash drive format is not compatible with the box</li> <li>• If one of the USB can not be read, please turn off the TV box for 30 seconds and restart the TV box</li> </ul>
Slow operation of the USB flash drive	<ul style="list-style-type: none"> <li>• Large file size or high resolution USB flash drive takes longer time to read and display on the TV screen</li> </ul>
The TV screen is blank and the player LED is blinking	<ul style="list-style-type: none"> <li>• Turn off the TV box, wait 30 seconds and turn on again</li> <li>• Check if HDTV connection is correct or try changing the HDTV cable</li> </ul>

### 5 BT-350 Remote

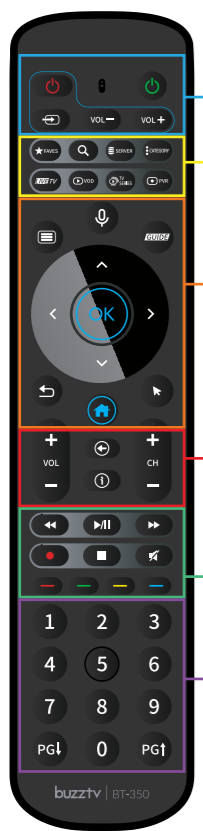

	TV Power Button
	STB - Standby, Power ON/OFF
	Source
	Source Volume + / Volume -
	Favourite Channels
	Search
	Server Settings
	To view categories when in Live TV/EPG/TV Series/VOD Menus
	Live TV
	Video On Demand
	TV Series
	Personal Video Recorder
	Menu
	Microphone
	Guide
	Arrow Keys / OK
	Back
	Home
	Pointer
	Volume - Up (+) / Down (-)
	Information
	Last Channel
	Channel - Up (+) / Down (-)
	Rewind
	Play/Pause
	Fast Forward
	Record
	Stop
	Mute
	Red Button
	Green Button
	Yellow Button
	Blue Button
	Number Pad
	0-9
	Page Down
	Page Up

### 6 BT-350 Remote - Learning Function

The learning function on the BT-350 remote is used to control your TV. You will be able to control: Power ON/OFF, Volume and Input Source. To do this you will need the factory remote control for your TV.



1. On the BT-350, press and hold the TV POWER + TV SOURCE for 3 seconds. Once the blue light turns on, release the buttons.

2. Press the learning key you would like to program (TV POWER/SOURCE/ TV VOL+/ TV VOL-) and the blue light will start flashing. The flashing blue light indicates the BT-350 is in learning mode.

3. Align your TV Remote and the BT-350 so that the front transmitters are pointing at each other. They should be within 1 inch or 3 cm of each other.

4. Press the button that you want to learn on the original remote. After receiving a learning function successfully, the red light on the BT-350 will blink 4 times.

5. To learn other keys, repeat Steps 2-4

6. After entering the learning mode, you can exit the learning mode by short pressing the "TV POWER + TV SOURCE" keys.

7. To clear the learning function memory Long press the "OK+Back" buttons for 3 seconds The red light flashes 3 times to clear the learning data

### 7 BT-350 Remote - Bluetooth Pairing

1. On your BuzzTV device, navigate to Settings > Remotes & Accessories > toggle Bluetooth to ON. Then choose: Add Accessory.

2. On the BT-350, press and hold the VOL - & the OK Button for 3 seconds. Once the red light starts flashing, release the buttons.

3. Select "BuzzTV BT-350" on your BuzzTV Device.

4. You are now Bluetooth Paired. You can confirm this by looking for "BuzzTV BT-350" under the Remotes and Accessories Menu.

#### Note:

If you do not select the key within 15 seconds after entering the learning state, it will automatically exit the learning state.

**Please note not all TVs are compatible with source pairing**

**CEC settings to support the BT-350, your TV & your BuzzTV Box**  
If you were successful in TV source pairing the BT-350 to your TV then you need to make sure the CEC settings on both the TV and your BuzzTV Box are enabled and in some cases in the correct HDMI port on the TV, refer to your TV manual if needed. (Initially set to ON)

### 8 Voice Control




To use Voice control press the microphone button & say a command

*Only supported on certain models\**

### 9 Backlight

To turn on or off the backlight press and hold the blue button for 3 seconds, the red LED will blink twice

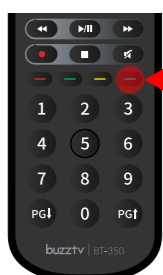

Press and hold the **blue** button for 3 seconds

### 10 Warranty Information

For warranty information and registration, please visit: [www.buzztv.com/register](http://www.buzztv.com/register)

[www.buzztv.com/support](http://www.buzztv.com/support)  
[cs@buzztv.com](mailto:cs@buzztv.com)