

U5

USER MANUAL

1 PACKAGE CONTENTS



U5 SET
TOP BOX



POWER
SUPPLY



2 X AAA
BATTERIES



BT-400
SMART
REMOTE



QUICK
START
CARD




HDMI
CABLE

2 CONNECTION


AV Connection

- Connect the AV cable of the 3 color (red/ white/yellow) to the U5's AV output interface, and the other end to the TV's AV input interface. Connection can be made by colour.
- Power on the U5. Set the TV video mode to AV input.

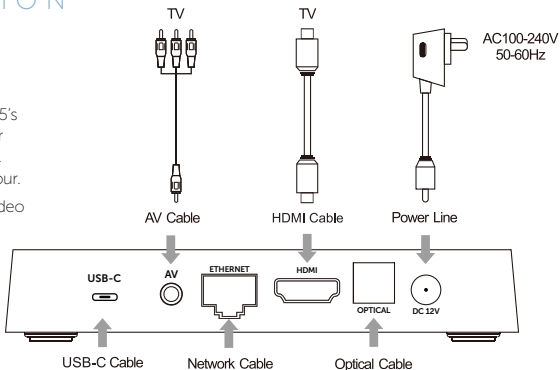

HDTV Connection

- Connect HDMI cable to the U5's output interface, and the other end to the TV's HDMI input interface.
- Power on the U5. Set the TV video mode to HDTV input.

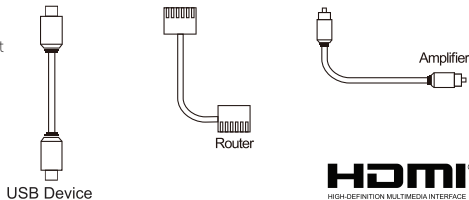

HDMI[®]
HIGH DEFINITION MULTIMEDIA INTERFACE

3 INSTALLATION STEPS

1. Connect U5 TV Box to the power supply.
2. Connect U5 to your TV with an HDMI Cable or AV Cable.
3. For a wired connection, plug-in an Ethernet cable from the TV Box to your modem or router. For wireless, choose your Wi-Fi network and input your Wi-Fi password.

4 TROUBLESHOOTING


Warning: Under no circumstances should you try to repair the U5 by yourself, as this will invalidate the warranty. Do not open it as there is a risk electrical shock. If any fault occurs, please first check with this troubleshooting checklist. If you are unable to remedy a problem by following this guide, contact your dealer for help.

Problem	Solution
No Power	<ul style="list-style-type: none">• Check if the power adapter is properly connected to the power and the TV box• Press the power on the remote controller to turn on the power
No Picture	<ul style="list-style-type: none">• Re-Connect the HDTV cable or AV cable• Check if the TV is powered on
No sound or distorted sound	<ul style="list-style-type: none">• Adjust the volume• Check that the speakers are connected correctly
The TV box does not respond to the remote control	<ul style="list-style-type: none">• Aim the remote control directly at the sensor on the front of the TV box• Reduce the distance to the TV box• Replace batteries in the remote control• Possibility of system crash, disconnect and reconnect the power supply
No sound during playback	<ul style="list-style-type: none">• The audio codec may not be supported by the TV box• Check the volume
The contents of the USB or flash drive cannot be read	<ul style="list-style-type: none">• The USB or flash drive format is not compatible with the box• If one of the USB can not be read, please turn off the TV box for 30 seconds and restart the TV box
Slow operation of the USB flash drive	<ul style="list-style-type: none">• Large file size or high resolution USB flash drive takes longer time to read and display on the TV screen
The TV screen is blank and the player LED is blinking	<ul style="list-style-type: none">• Turn off the TV box, wait 30 seconds and turn on again• Check if HDTV connection is correct or try changing the HDTV cable

5 SATA DRIVE (Optional)

Installing Sata Drive:

1. Remove bottom plate (A)
2. Orientate the 2.5 Sata connectors (B) to the corresponding connector on the U5 and attach
3. Replace bottom plate

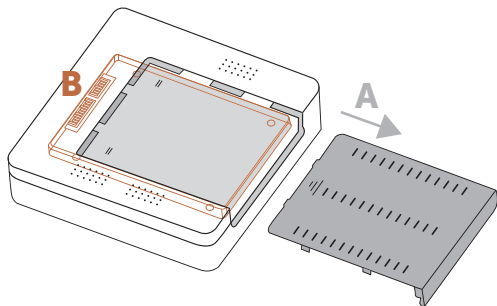

6 LIGHTS & INDICATORS

Lighting on Front of U5 indicates the following:



Blue light - Unit is on



Red light - Unit is off

7 WARRANTY INFORMATION

For warranty information and registration, please visit:
www.buzztv.com/register

www.buzztv.com/support
cs@buzztv.com